


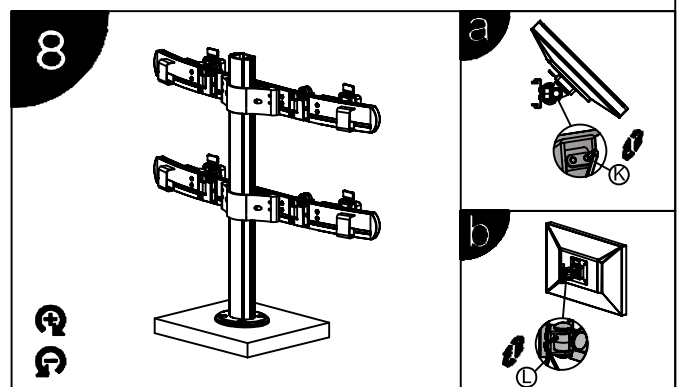
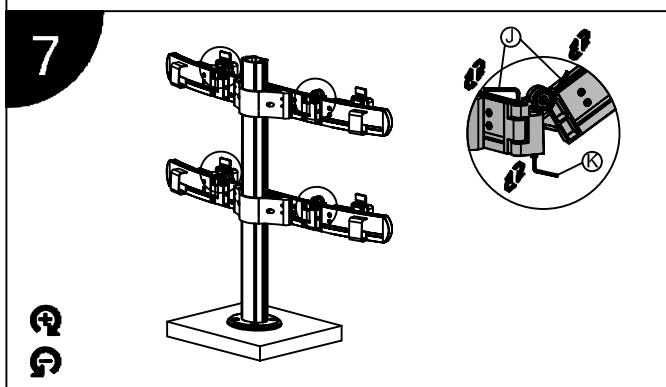
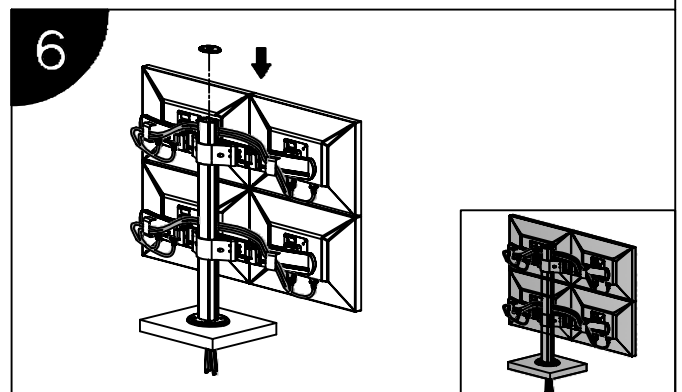
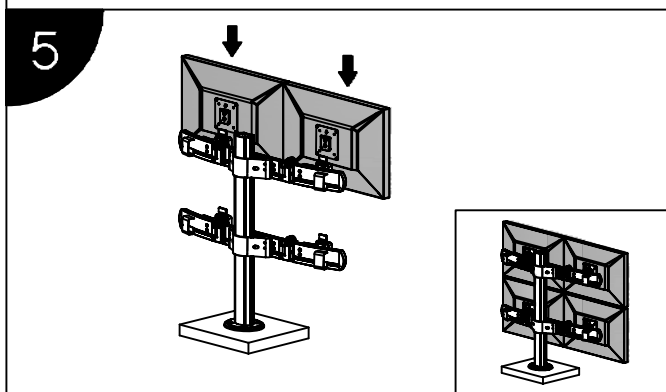
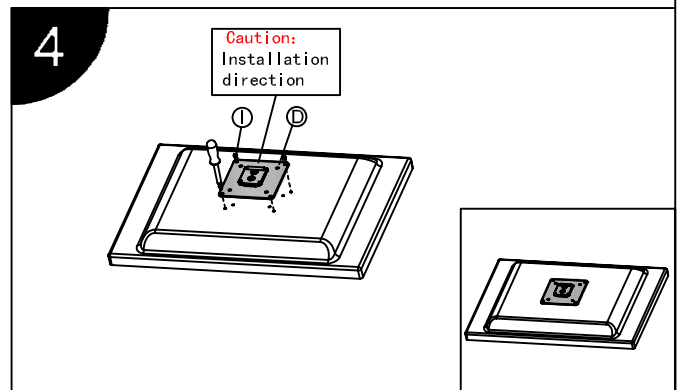


## Installation Manual


 
 
 


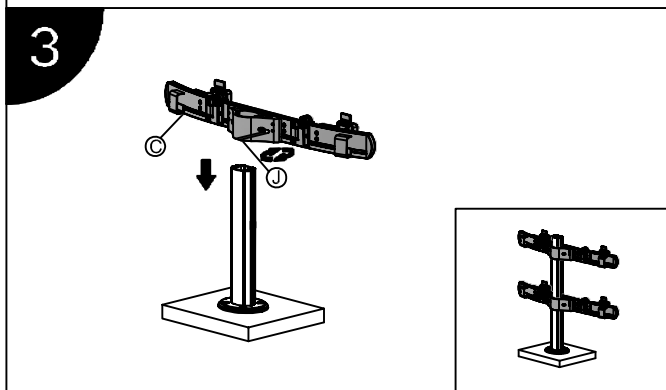

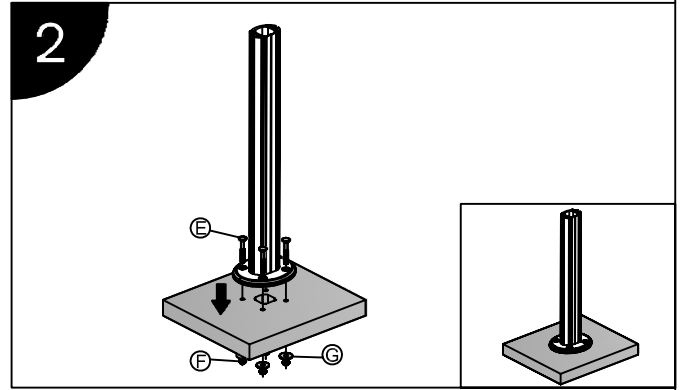

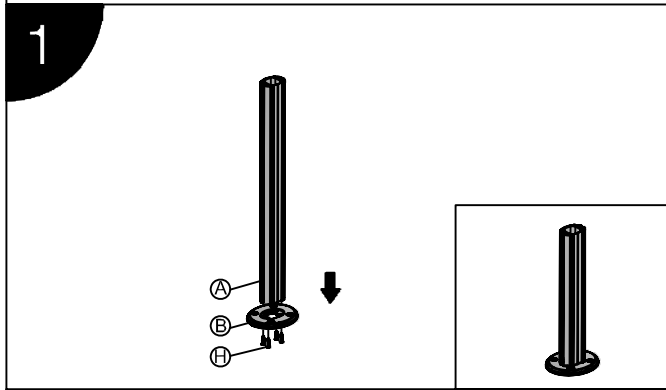

Model No. : L400

### Installation Steps



# Installation Manual

## Model No. : L400

<b>Parts list</b>			
<b>No.</b>	<b>ITEM</b>	<b>SPECS</b>	<b>QUANTITY</b>
A			1
B			1
C			2
D			4
E		M8*60	4
F		M8Cap	4
G		M8Gasket	4
H		ST4.8*25	4
I		M4*12	16
J		M5	1
K		M4	1
L		M3	1