


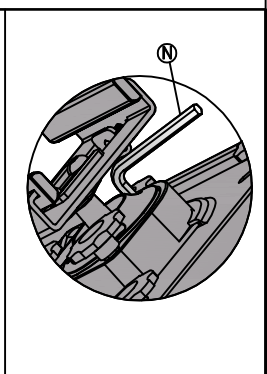
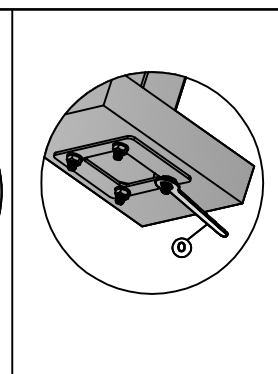
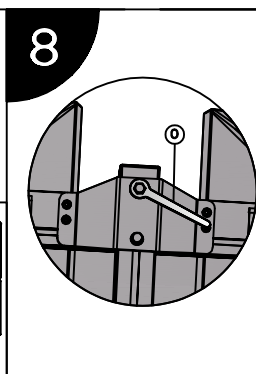
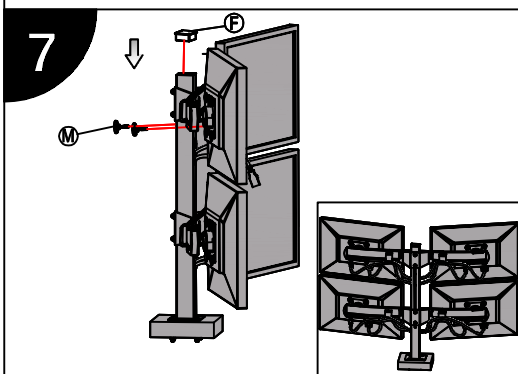
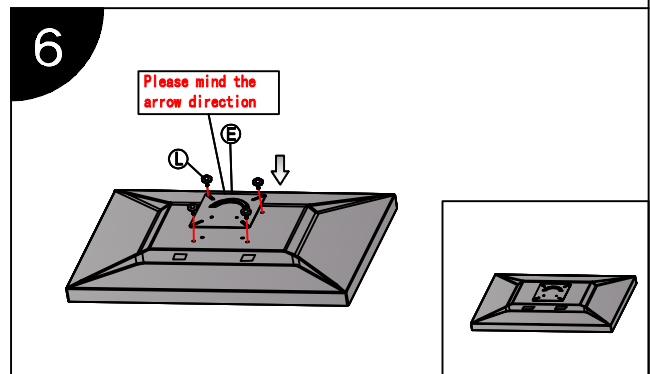
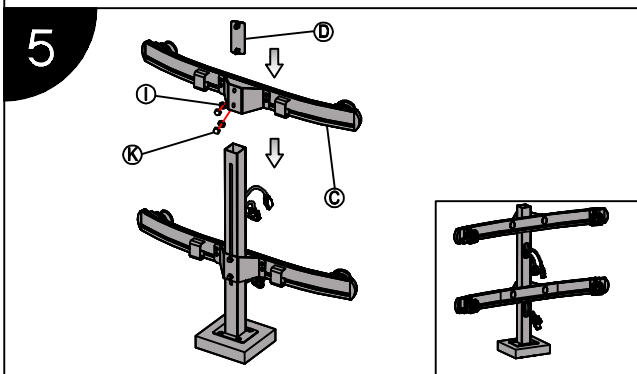
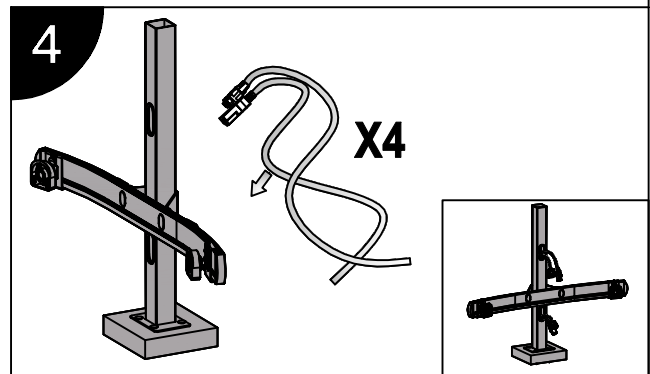


Installation Manual

 

 


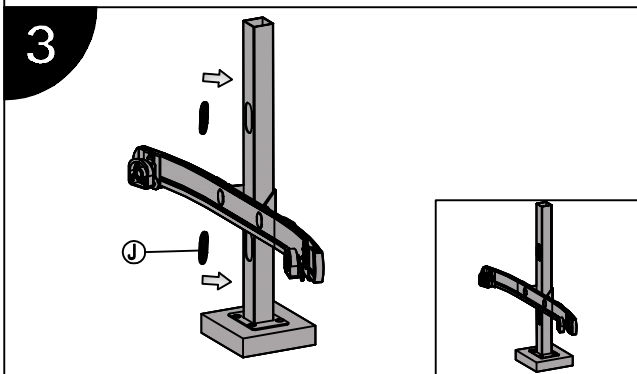

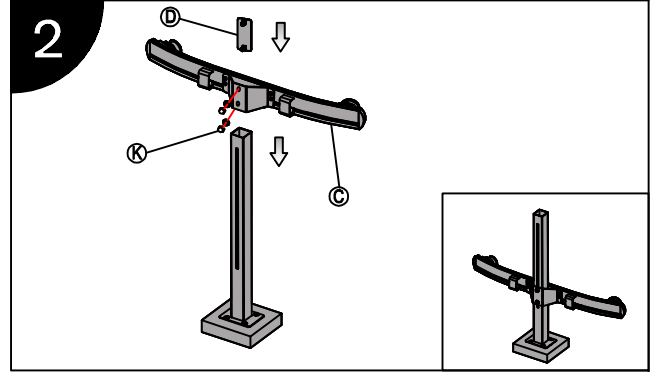

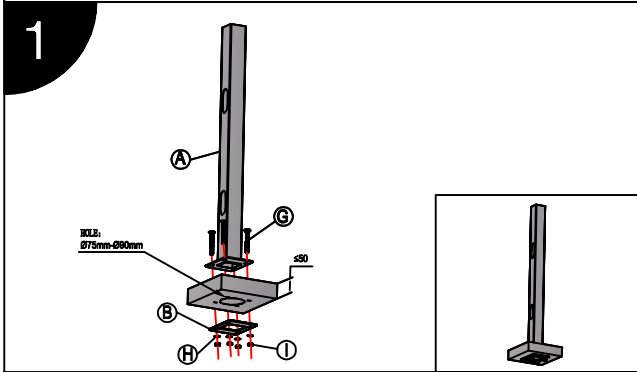



 
Model No.: BL400

Installation Steps



Installation Manual

Model No.: BL400

Parts list			
No.	ITEM	SPECS	QUANTITY
A			1
B			1
C			2
D			2
E			4
F			1
G	I	M8*65	4
H		M8	8
I		M8	4
J			2
K		M8	4
L		M4*12	16
M		M4*20	8
N		M4	1
O			1